


Figure 1  
Figura 1



Figure 2  
Figura 2

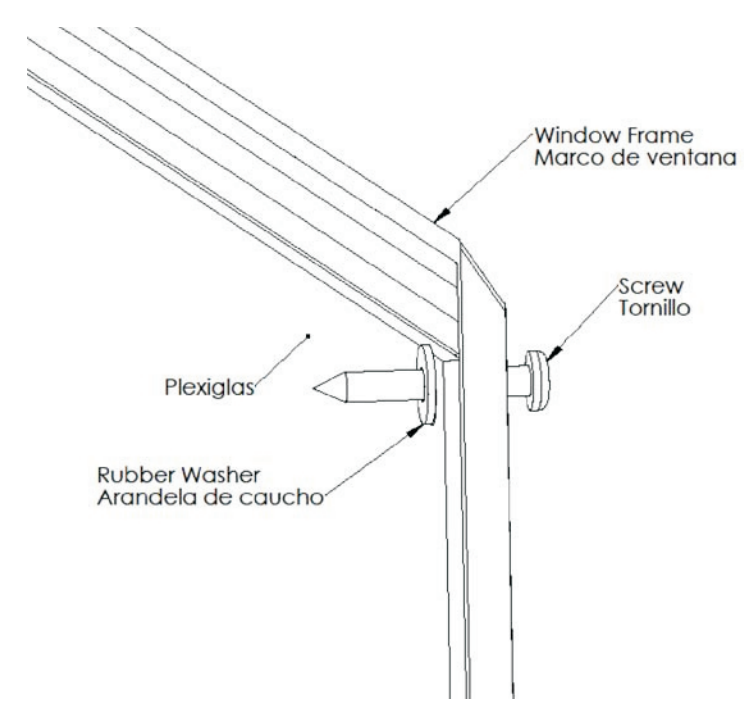

### Window Frame Installation Instructions

1. Place this install sheet on the garage door where desired, using a tape measure to ensure the install sheet is centered on your garage door. Then tape to the door, stand back and observe, make the proper adjustments until satisfied. See Figure 1
2. Using a drill, drill a pilot hole (1/8") in the hole locations on the install sheet. This will ensure the proper location for mounting your window frame.
3. Remove the protective film on the backside of the Plexiglas.
4. Lay the window frame on a flat non-scratch surface. Take your screws and insert them from the front of the part and put your rubber washers on the back side of the screw. See Figure 2
5. Line up the screws on the window frame with the pre-drilled holes in the garage door. Then tighten them down using your Phillips screw driver. Be careful not to over tighten the screws.
6. Do steps 1-5 for the other window frame.

### Window Kit Includes

- 2 Window Frames
- 12 Phillip 1 1/2" Screws.
- 12 Rubber Washers

### Tools Required for Installation:

- Drill
- 1/8" Drill Bit
- Phillips Screwdriver
- Tape Measure
- Masking/Clear Tape

### Recommended Cleaning

To clean Window Frame, wash with plenty of non-abrasive soap or detergent and water. Use the bare hand to feel and dislodge any caked dirt or mud. A soft, grit-free cloth, sponge or chamois may be used, but only as a means of carrying water to the sheet. Do not use hard, rough cloths that will scratch the Plexiglas sheet. Dry with a clean damp chamois.

### Instrucciones para la instalación de la ventana

1. Pone este papel de instalación en la puerta de garaje dónde lo desea, con una cinta métrica para garantizar que el papel de instalación se centro en la puerta del garaje. Entonces, pega con cinta adhesiva a la puerta. Pasa hacia atrás, observa, y hace los ajustes apropiados hasta está satisfecho. Consulta figura 1
2. Usa una taladradora. Taladra un agujero piloto (1/8 pulgadas) en las ubicaciones de los agujeros en el papel de instalación. Esto asegurará la ubicación correcta para el montaje de su marco de ventana.
3. Retira la película protectora en la parte trasera de plexiglás.
4. Pone el marco de la ventana en una superficie llano y no raya. Toma sus tornillos e insertarlos desde la parte frontal de la pieza. Entonces, pone sus arandelas gomas en la parte posterior del tornillo. Consulta figura 2
5. Pone los tornillos en el marco de ventana con los agujeros pre-taladro en la puerta de garaje. Entonces, apretó los tornillos con su destornillador Phillips. No apretó los tornillos más de la cantidad apropiada.
6. Seguí los pasos 1-5 para el otro marco de ventana.

### Incluye en kit de ventana:

- 2 Marcos de ventana
- 12 1 1/2 "tornillos Phillips
- 12 arandelas gomas

### Herramientas necesarias para la instalación:

- Taladradora
- 1/8 " bit de taladradora
- destornillador Phillips
- Medida de cinta
- cinta adhesiva

### Recomienda para limpieza:

Para limpiar el marco de ventana, lava con jabón no abrasivos o detergente y agua. Usa la mano desnuda para tocar y sacar alguna suciedad o barro. Un paño suave y libre de arena, esponja, o gamuza puede utilizarse, pero sólo para llevar agua al papel. No usa paños duros o ásperos que puede se raya la hoja de plexiglás. Seca con una gamuza limpia.

