



Installing your Signature Décor Windows

Installation Procedure:

1. Verify that your Signature Décor Windows will fit properly on your garage door. (Refer to Coach House Accents® document "Garage Door Specifications" available on our website.)
2. Place your full-size paper template onto the garage door where desired, using a tape measure to ensure that the template is positioned properly on the door panels. (See diagram below) Tape the paper template in place on the door panel.
3. Drill 1/8-inch pilot holes in the six locations indicated on the template. Drill through the paper into the door, then remove the paper template.
4. Lay the window face-down on a smooth surface that will not scratch the window, and remove the protective film from the back of the Plexiglas.



Your Window Kit includes:

- 2 Window Frames w/ plexiglas inserts
- 12 Phillips-head 1 1/2" screws
- 12 Rubber Washers
- Full-size paper template

Tools required for installation:

- Electric drill with 1/8" drill bit
- Phillips Screwdriver
- Tape Measure
- Masking Tape
- Level
- Step stool or ladder




5. Insert the six screws into the mounting holes from the front of the panel, and press the rubber washers onto the screw threads from the back side, all the way to the window panel.

6. Lift the window up to the door panel, and align the protruding screws to the pilot holes. Tighten the screws to fasten the window to the

door. TAKE CARE NOT TO OVER-TIGHTEN, which can pull the threads from the holes or distort the panel.

Repeat this process for your other window panels.

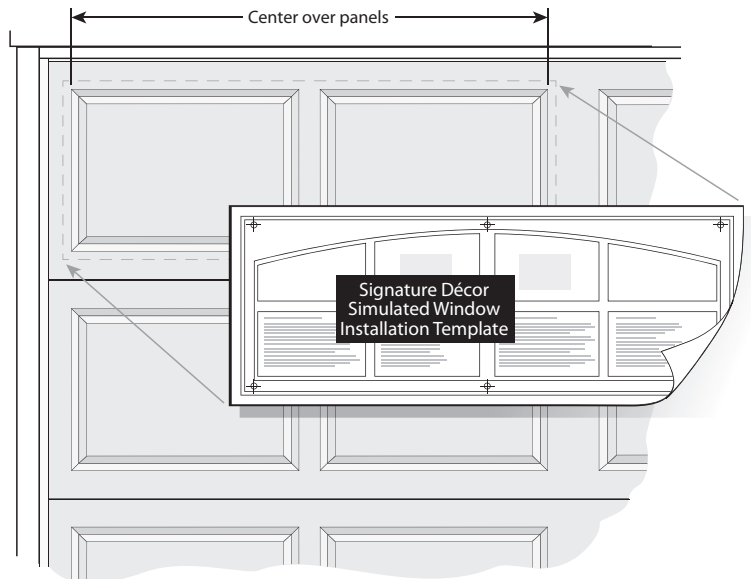

Shown is a short-panel door. Use the same technique for long-panel or flat-panel doors.

NOTE: ALWAYS MEASURE YOUR DOOR PANEL BEFORE YOU START TO BE SURE!

Manufacturers may change stamping sizes due to model and design changes. Coach House Accents® cannot be responsible for these changes.

Lacks Home Products LLC
5460 Cascade Road S.E. • Grand Rapids, MI 49546
PH: 800-351-9776 • www.coachhouseaccents.com